

## **Striping Installation Instructions**

Please consult your Sales Representative or Zirconia Technical Support prior to the application of any striping materials over Zirconia products. Technical guidance or questions relating directly to use, properties, or characteristics of products not distributed by Zirconia Inc. should be directed to the manufacturer or their representatives.

## **Application Instructions**

- 1. Prior to applying any striping paint or other products, visually inspect the application area for any problems which may have occurred during the installation of Zirconia products. Immediately consult your Sales Representative or Zirconia Technical Support if concerns arise.
- 2. Striping paint can be installed 16-72 hours after application of Zirconia topcoats. If striping is being installed in an active environment or after 72 hours, please see *Striping Recoat Instructions* below.
- 3. Consult manufacturer's specifications for instructions on mixing and application of striping paint.
- 4. Ensure the application area is completely free of dust, debris, or other contaminants which may inhibit adhesion.
- 5. Using a hand roller, striping machine, or other preferred means of application, install striping paint according to manufacturer's specifications.
- Allow striping paint to dry/cure according to manufacturer's specifications before introducing vehicular or foot traffic.

## **Striping Recoat Instructions**

If recoating/reinstalling striping paint, or if installing in an area with active traffic or operational activities.

- 1. Inspect application area to ensure Zirconia products are in sound condition and flooring/substrate is not in need of repair.
- 2. Thoroughly clean application area, taking care to remove built up dirt, debris and other contaminants which may inhibit adhesion.
- 3. A light sanding or buffing of application area is strongly recommended, to ensure removal of surface contaminants and expose fresh reactive material. If recoating over existing striping paint, please consult manufacturer's instructions on recoating.
- 4. Follow Application Instructions above, beginning at step 3.